


With the shock spring removed, pull the bump rubber down the piston rod at least 2 inches. Twisting the snap ring slightly, slip the snap ring onto the piston rod between the washer and the spring clip. Install the travel limiter halves onto the piston rod. Using snap ring pliers, install the snap ring into the groove of the travel limiter.

Caution: Never attempt to remove or replace the spring without a spring compression tool.

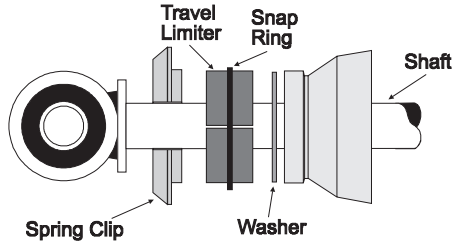


www.progressivesuspension.com

6911 Marlin Circle, La Palma, CA 90623 (714)523-8700 Fax (714) 523-3220

Copyright © 2001 by Progressive Suspension, All Rights Reserved.

With the shock spring removed, pull the bump rubber down the piston rod at least 2 inches. Twisting the snap ring slightly, slip the snap ring onto the piston rod between the washer and the spring clip. Install the travel limiter halves onto the piston rod. Using snap ring pliers, install the snap ring into the groove of the travel limiter.

Caution: Never attempt to remove or replace the spring without a spring compression tool.

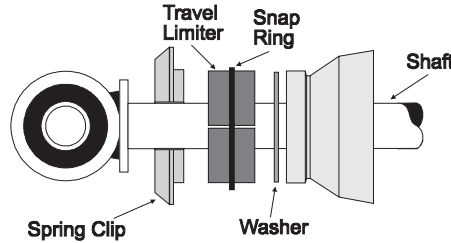


www.progressivesuspension.com

6911 Marlin Circle, La Palma, CA 90623 (714)523-8700 Fax (714) 523-3220

Copyright © 2001 by Progressive Suspension, All Rights Reserved.

With the shock spring removed, pull the bump rubber down the piston rod at least 2 inches. Twisting the snap ring slightly, slip the snap ring onto the piston rod between the washer and the spring clip. Install the travel limiter halves onto the piston rod. Using snap ring pliers, install the snap ring into the groove of the travel limiter.

Caution: Never attempt to remove or replace the spring without a spring compression tool.

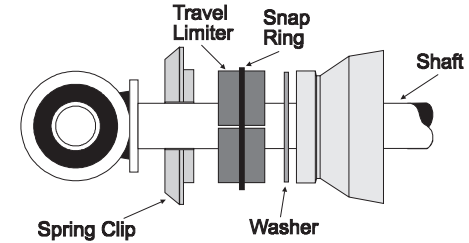


www.progressivesuspension.com

6911 Marlin Circle, La Palma, CA 90623 (714)523-8700 Fax (714) 523-3220

Copyright © 2001 by Progressive Suspension, All Rights Reserved.

With the shock spring removed, pull the bump rubber down the piston rod at least 2 inches. Twisting the snap ring slightly, slip the snap ring onto the piston rod between the washer and the spring clip. Install the travel limiter halves onto the piston rod. Using snap ring pliers, install the snap ring into the groove of the travel limiter.

Caution: Never attempt to remove or replace the spring without a spring compression tool.

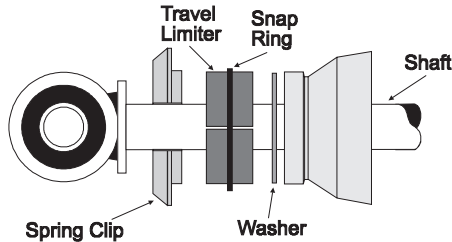


www.progressivesuspension.com

6911 Marlin Circle, La Palma, CA 90623 (714)523-8700 Fax (714) 523-3220

Copyright © 2001 by Progressive Suspension, All Rights Reserved.

With the shock spring removed, pull the bump rubber down the piston rod at least 2 inches. Twisting the snap ring slightly, slip the snap ring onto the piston rod between the washer and the spring clip. Install the travel limiter halves onto the piston rod. Using snap ring pliers, install the snap ring into the groove of the travel limiter.

Caution: Never attempt to remove or replace the spring without a spring compression tool.

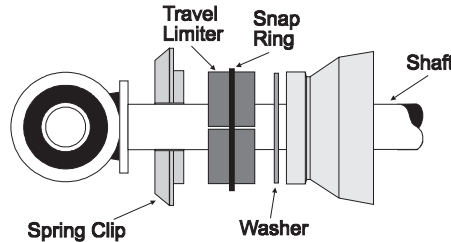


www.progressivesuspension.com

6911 Marlin Circle, La Palma, CA 90623 (714)523-8700 Fax (714) 523-3220

Copyright © 2001 by Progressive Suspension, All Rights Reserved.

With the shock spring removed, pull the bump rubber down the piston rod at least 2 inches. Twisting the snap ring slightly, slip the snap ring onto the piston rod between the washer and the spring clip. Install the travel limiter halves onto the piston rod. Using snap ring pliers, install the snap ring into the groove of the travel limiter.

Caution: Never attempt to remove or replace the spring without a spring compression tool.

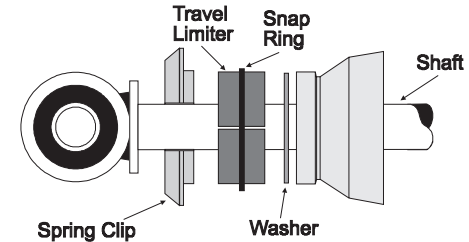

www.progressivesuspension.com

6911 Marlin Circle, La Palma, CA 90623 (714)523-8700 Fax (714) 523-3220

Copyright © 2001 by Progressive Suspension, All Rights Reserved.