



INSTALLATION INSTRUCTIONS

494 SERIES SHOCKS

TOOLS NEEDED:



Floor Jack, Tape Measure, Torque Wrench. For specifics, please refer to your shop manual.

NOTE:

PLEASE read and refer to our warning, caution, and warranty on the last page before proceeding to install your new shocks on you bike.

INSTALLATION:

1. First, place a quality jack or sufficient blocks under your motorcycle to securely lift the rear wheel slightly off the ground.
2. Next, using the correct shop manual for your bike, remove the old shocks and note the location of any mounting hardware. If additional accessories are installed on your motorcycle, please refer to their mounting instructions for removal to gain access to your shocks.
3. Before installing your new Progressive shocks you need to check the tire to fender clearance, making sure that the tire does not come in contact with the fender. If the rear fender or tire has been changed to anything other than stock, a travel limiter may be required. On some models with side bags or luggage, the bag or luggage mounts may need to be modified to eliminate any interference. Install the shock assemblies onto the motorcycle with the included hardware, noting any special instructions in the hardware kit. Tighten bolts / nuts to their proper torque and then check the clearances of the shock to the frame, shock to chain or belt, shock to chain or belt guard, shock to brake caliper and/or linkage, and brake rotor.

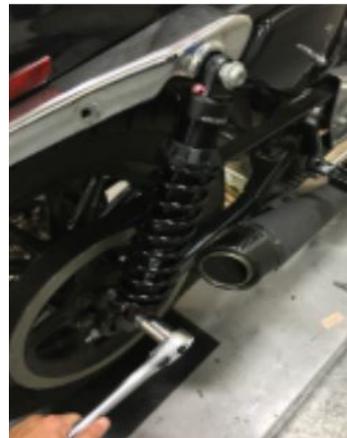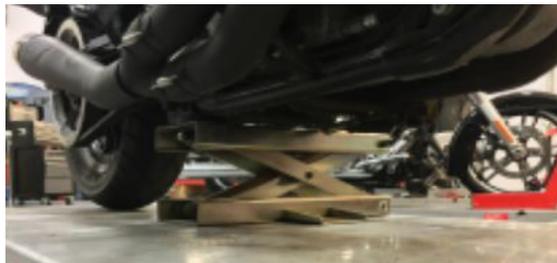

PROGRESSIVE
SUSPENSION

TECH: 714.523.8700



WWW.PROGRESSIVESUSPENSION.COM

FAX: 714.523.3220




INSTALLATION INSTRUCTIONS 494 SERIES SHOCKS

- Reinstall any accessories removed in accord with their mounting instructions. Make sure accessories do not interfere with the shocks throughout their full travel. If any accessories bolt to the shock mounting points, a careful inspection must be made to insure that they do not bind the shocks in any way. Your shocks will come pre-installed with either bushings or bearings; refer to your hardware pack supplement during installation.
- Set your ride sag.** Proper spring preload will permit the rear suspension to sag, or compress, approximately 1/3 of the wheel travel from full extension. To check sag, take a measurement from the center of the rear axle, straight up to a vertical point on the rear fender or frame with the shocks fully extended. Then, take a second measurement using the same points with the rider(s) on the bike. The difference between the two measurements is the ride sag. Use the rightmost column in the table below to find the target ride sag based on your application. If the bike is sagging too much, increase the preload. ****Optionally - see the included application supplement & follow the instructions to achieve the indicated "Target Ride Length". This will also set proper ride sag**

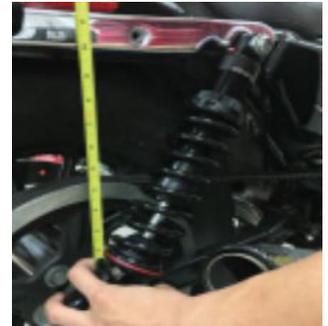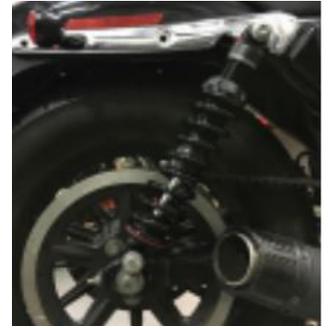

PRELOAD ADJUSTMENT

- Spring preload adjustments are made by turning the adjuster (this can be done by hand or using a spanner wrench). Turn this adjuster clockwise to increase spring preload and counterclockwise to decrease spring preload. Set the preload equally on both shocks using these measurements as your guide. See table and figure below.

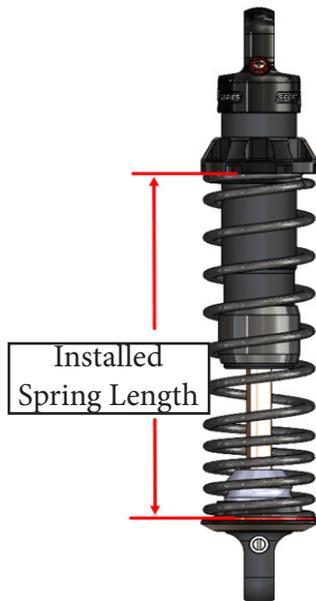

Shock Part #	Min. Spring Installed Length Inches [mm]	Max. Spring Installed Length Inches [mm]	Target Ride Sag, Inches [mm]
494-1001	7.1 [180]	7.9 [202]	1.4 [35]
494-1002	7.6 [193]	9.1 [230]	1.6 [41]
494-1003	6.3 [160]	7.8 [198]	0.9 [23]
494-1004	6.9 [174]	8.8 [224]	1.2 [31]
494-1005	6.1 [154]	7.8 [198]	0.7 [19]
494-1006	6.2 [156]	7.8 [198]	0.7 [19]
494-1007	7.1 [180]	8.8 [224]	1.0 [25]
494-1008	7.3 [185]	8.8 [224]	1.0 [25]
494-1009	7.1 [180]	7.9 [202]	1.0 [25]
494-1010	7.6 [193]	9.1 [230]	1.2 [31]
494-1015	7.1 [179]	8.1 [205]	1.1 [27]
494-1016	7.8 [197]	8.8 [224]	1.5 [37]

NOTE: The adjuster is a threaded device, so if you rotate the adjuster beyond the recommended maximum setting you run the risk of the spring losing contact at full extension which can lead to excessive noise and/or component failure. Similarly if the adjuster is rotated to a setting beyond the recommended minimum you run the risk of the spring coils binding at full compression which can lead to a harsh ride and/or component failure.





REBOUND ADJUSTMENT:

7. Your 490 shocks also have an external rebound damping adjustment which can be adjusted using a flathead screwdriver. The rebound adjuster will have 12 turns of adjustment and is preset from the factory at our recommended setting of 6 turns from closed (Closed is turning the adjuster clockwise until it is snug). Adjustments can be made based on riding style and road conditions. Turn the adjuster clockwise to increase rebound damping or turn the adjuster counter-clockwise to decrease rebound damping.



Increase Rebound: More rebound may be desired if the back of the bike feels like it is kicking up too much during braking or after a bump is hit. More rebound may also be desired if the bike feels like it is moving around excessively and not settling down after hitting a bump

Decrease Rebound: Less rebound may be desired if the back of the bike is too firm and not very compliant with the road. This may be noticeable after a series of bumps very close to each other or after a large bump is encountered. Less rebound may also be desired if the ride feels too harsh or choppy.

We recommend making rebound adjustments 2 turns at a time until a desired rebound setting is found. The adjuster can then be finely tuned in 1 turn increments if needed.

8. Test ride: If excessive bottoming occurs, you need to increase your spring pre-load setting as described above.
9. Lastly, ride and enjoy...Safely!

For a visual interpretation of this install, check out our video guide on our youtube channel at <https://www.youtube.com/user/ProgressiveVideos>





WARNING

This means there is the possibility of injury to yourself or others. Raising or lowering the rear of your motorcycle will affect the steering and initial ground clearance. If the motorcycle is lower to the ground, care should be taken to avoid bottoming, especially over bumps or in turns. Raising the rear of a motorcycle can change the steering head angle. Always use extreme caution when riding after a change is made and take time to get accustomed to any handling change. The motorcycle must be securely blocked to prevent it from tipping over when the shocks are removed. Failure to do so can cause serious damage and/or injury. The use of lowering blocks on Progressive Suspension shocks is not recommended. Use of a lowering kit may void the warranty or damage the shock/motorcycle. Progressive Suspension shocks are designed to work on the OEM (Original Equipment) frame and swingarm. Use of these shocks on a frame or swingarm other than OEM may produce an unsatisfactory ride and void the warranty. Make sure that proper bushings/sleeves are installed in the shocks. Improper bushings/sleeves can cause unsatisfactory and/or unsafe operation. For Progressive Suspension shocks that use spherical bearings in the shock mounting ends. You MUST pack each bearing with high quality extreme pressure (EP) grease before installing (if not already present). Periodically service the bearing(s) by cleaning and repacking to ensure optimum operation. Dirty and/or ungreased bearings can cause poor performance, shock noise and may also lead to shock failure and loss of control.

CAUTION

Make sure to adjust your spring preload with both ends of the shock mounted to the motorcycle or otherwise secured as to not allow rotation of the ends while making the pre-load adjustment. Not doing so may cause internal damage to the shock which could result in shock malfunction and injury. Be sure not to remove the travel limiters (if any) and the jounce bumper. If removed, some components could come into contact during the ride (tire/fender, swing arm/frame, etc), resulting in very unstable behavior which could lead to serious damage and/or injury. Do not attempt to disassemble the shock yourself. Our shocks contain highly pressurized gas, attempting to open them could lead to injury. Progressive Suspension's shocks are designed to last the lifetime of the motorcycle. If for any reason you need to disassemble the shock, please call our customer support line at: 1.877.690.7411.

WARRANTY

Progressive Suspension warrants to the original purchaser of this Part to be free of manufacturing defects in materials and workmanship with a lifetime warranty. In the event warranty service is required, you must call Progressive Suspension immediately with a description of the problem. If it is deemed necessary for Progressive Suspension to make an evaluation to determine whether the part is defective, a return authorization number will be given by Progressive Suspension. The parts must be packaged properly so as to not cause further damage and returned prepaid to Progressive Suspension with a copy of the original invoice of purchase and a detailed letter outlining the nature of the problem. If after the evaluation by Progressive Suspension the part was found to be defective it will be repaired or replaced at no cost to you. If we replace it, we may replace it with a reconditioned one of the same design. Progressive Suspension shall not be held liable for any consequential or incidental damages resulting from the failure of a Progressive Suspension part. Progressive Suspension shall have no obligation if a part becomes defective as a result of improper installation or abuse.

