



Installation Instructions

“Drop-In” Fork Lowering Kit

06-17 FXD\B\C\F\L\WG & 35 Dyna Models

08-11 FXCW/C “Rocker” Models

ATTENTION

Statements in these instructions that are preceded by the following words are of special significance:

Warning

This means there is the possibility of injury to yourself or others.

Caution

This means there is the possibility of damage to the vehicle.

Note

Information of particular importance has been placed in italics.

IMPORTANT NOTICE

Caution: Follow instructions in an authorized shop manual or take the vehicle to a competent dealer.

The vehicle must be securely blocked to prevent it from dropping or tipping when the fork springs are removed. Failure to do so can cause serious damage and/or injury.

Progressive Suspension Drop-In Fork Springs are designed to work with the OEM (Original Equipment) forks. Use of this product on any forks other than OEM may produce an unsatisfactory ride and void the warranty.

Prior to installing your Drop-In Fork Lowering kit, you **MUST REMOVE** any previously installed fork lowering kit components.

Warranty

Progressive Suspension warrants to the original purchaser this Part to be free of manufacturing defects in materials and workmanship with a lifetime limited warranty. In the event warranty service is required, you must call Progressive Suspension immediately with a description of the problem.

If it is deemed necessary for Progressive Suspension to make an evaluation to determine whether the part is defective, a return authorization number will be given by Progressive Suspension. The parts must be packaged properly so as to not cause further damage and returned prepaid to Progressive Suspension with a copy of the original invoice of purchase and a detailed letter outlining the nature of the problem. If after the evaluation by Progressive Suspension the part was found to be defective it will be repaired or replaced at no cost to you. If we replace it, we may replace it with a reconditioned one of the same design.

Progressive Suspension shall not be held liable for any consequential or incidental damages resulting from the failure of a Progressive Suspension part. Progressive Suspension shall have no obligation if a part becomes defective as a result of improper installation or abuse.

Warning

Changing the chassis and/or suspension on any vehicle will change the handling characteristics of that vehicle. Care should be taken when operating the vehicle with such modifications while getting accustomed to the new handling characteristics.

Installation

- Read all the instructions carefully before installing this kit on your motorcycle. Use your Harley-Davidson manual as a reference while installing this kit.
- Support and lift the motorcycle securely so the front wheel is just off the ground and able to spin with light brake drag. The balance point is toward the front of the engine.
- If your bike is currently equipped with any type of fork lowering kit, such as a standard Progressive Suspension lowering kit or other, You **MUST** remove that kit before installing this Drop-In Kit. The Drop-In fork kit is designed to work **ONLY** with the Stock fork rebound or top out springs. **Figures 1 & 2**

Warning

Failure to remove existing fork lowering kit components will result in unsatisfactory performance and may lead to fork damage, loss of vehicle control and injury.

DYNA GLIDE ONLY:

- Remove any accessories necessary to gain access to the fork caps and triple trees. Remove the handle bars if they are directly above the fork caps to allow for the removal of the fork springs.
- Loosen the pinch bolts on the upper triple clamp. Failure to do so will make fork cap removal very difficult and potentially damage the caps and or fork tubes. **Figure 3**
- Carefully remove the fork cap.

Warning

CAUTION The fork caps are under spring pressure and care must be taken as they are removed to avoid injury! Keep downward pressure on the caps as you unscrew the final threads, this will minimize the spring “jump” that will occur as soon as the cap is fully un-threaded. **BE CAREFUL!**

FXCW ROCKER ONLY:

- Per the instructions in an authorized shop manual remove the forks from your motorcycle. This will entail removing the wheel, fender, and possibly several other items depending on the model - again, refer to an authorized shop manual for removal of these components.
- Clamping the fork near where the lower triple-clamp would be - using "soft-jaws" and being careful not to scratch or damage the fork tube - carefully remove the fork cap.

Warning

CAUTION The fork caps are under spring pressure and care must be taken as they are removed to avoid injury! Keep downward pressure on the caps as you unscrew the final threads, this will minimize the spring "jump" that will occur as soon as the cap is fully un-threaded. **BE CAREFUL!**

ROCKERS & DYNAS:

- Remove the stock fork spring, washers and spacers. You will reuse the stock washers.
- For optimum performance we highly recommend the forks be thoroughly cleaned and new fork oil installed per your authorized Harley-Davidson manual.

Caution

While the installation of this Drop-In Fork Spring kit will not change the compressed length of the front forks, we have found that some bikes may not have adequate clearance between the fender, fairing and / or accessories. So with the fork springs removed, forks installed, lift the front forks, or lower the bike to completely compress the front forks. With the forks fully compressed, check for adequate clearance between the tire, fender, fairing, crash bar, accessories, etc. You must correct any clearance issues prior to installing this kit to avoid vehicle damage and / or vehicle control problems.

- Determine the correct PVC spacer length for your year model bike - and the approximate amount you would like to lower your forks - from the Chart in **Figure 4**. You may need to cut the supplied spacer to your proper length.
- With the front forks fully extended again, insert the Drop-In Fork Spring into the fork tube, then insert the Drop-In Compensation Spring, Washer and PVC spacer. **Figure 5**
- Reinstall the fork cap. The design of this kit makes this very easy as the only spring pressure you will feel during cap installation is from the Drop-In Compensation Spring which is only a light pressure by design.
- On Dynas, tighten the fork cap, the triple clamp pinch bolts and reinstall the handle bars and any accessories removed according to their manufacturers instructions. Likewise, on Rockers reinstall forks and all other components removed per authorized service manual.
- Remove motorcycle from lift and re-check all fasteners for proper tightness.

FINE TUNING

- Front ride height can be adjusted by changing the PVC spacer length. We recommend making changes in .25" increments - being certain not to make your spacer either longer than the 1" lower length, or shorter than the 2" lower length spacers specified for your model in **Figure 4**.
- The operator must use extreme caution when operating a modified motorcycle, particularly while getting familiar with its altered handling characteristics.




Figure 1




Figure 2

Prior to installing your Drop-In Fork Lowering kit, you **MUST REMOVE** any previously installed fork lowering kit components, such as the 1 or 2 additional top out springs illustrated above. Additional top out springs are common in many such kits.

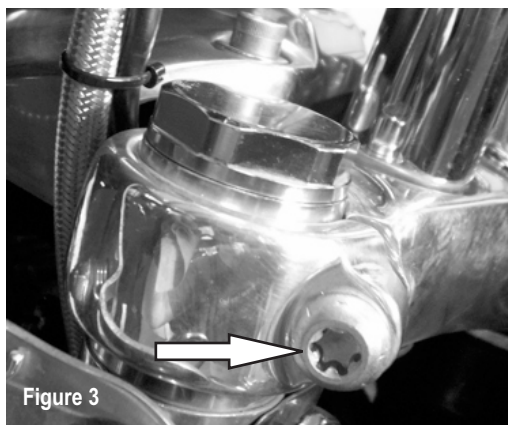


Figure 3

YEAR		1" Lower	2" Lower
2006-2017	FXD\B\C\L\35	1.50"	.50"
2006-2008	FXDWG	4.00"	3.00"
2010-2017	FXDWG	2.25"	1.25"
2008-2011	FXCW/C	.25"	N/A
2008-2017	FXDF	2.50"	1.50"

Figure 4

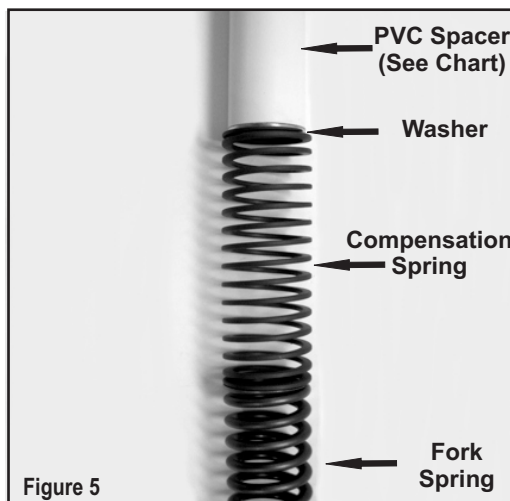


Figure 5