


PROGRESSIVETM SUSPENSION[®]

6911 Marlin Circle. La Palma, Ca. 90623
(714) 523-8700, Fax (714) 523-3220

PROGRESSIVETM SUSPENSION[®]


6911 Marlin Circle. La Palma, Ca. 90623
(714) 523-8700, Fax (714) 523-3220

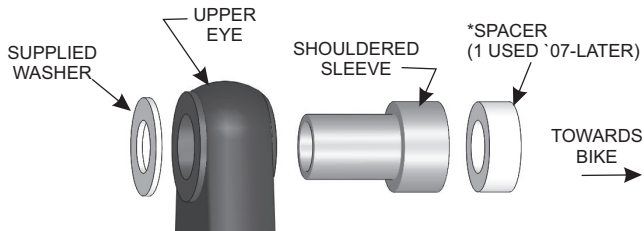

INSTALL SLEEVES AND SPACERS AS SHOWN IN ILLUSTRATIONS.


*NOTE: USE ONE OF THE SUPPLIED SPACERS ON EACH OF THE UPPER EYES OF 2007 AND LATER MODELS. EARLIER MODELS DO NOT REQUIRE SPACERS ON THE UPPER EYES.

**NOTE: ON LOWER EYES, IF BOLT PROTRUDES BEYOND THE THREADS (BELT-GUARD/NUT) INSTALL ONE OF THE SUPPLIED FLAT-WASHERS BETWEEN THE SHOULDERED SLEEVE AND THE SWINGARM.

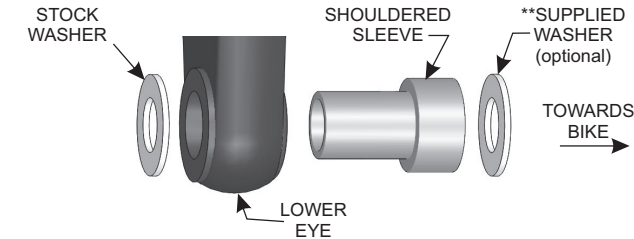

www.progressivesuspension.com


Copyright © 2014 by Progressive Suspension® All Rights Reserved.

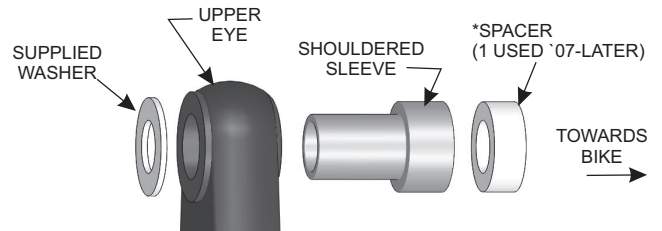

INSTALL SLEEVES AND SPACERS AS SHOWN IN ILLUSTRATIONS.

*NOTE: USE ONE OF THE SUPPLIED SPACERS ON EACH OF THE UPPER EYES OF 2007 AND LATER MODELS. EARLIER MODELS DO NOT REQUIRE SPACERS ON THE UPPER EYES.

**NOTE: ON LOWER EYES, IF BOLT PROTRUDES BEYOND THE THREADS (BELT-GUARD/NUT) INSTALL ONE OF THE SUPPLIED FLAT-WASHERS BETWEEN THE SHOULDERED SLEEVE AND THE SWINGARM.

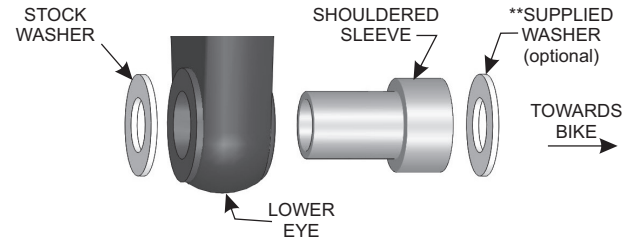

www.progressivesuspension.com


Copyright © 2014 by Progressive Suspension® All Rights Reserved.

PROGRESSIVETM SUSPENSION[®]

6911 Marlin Circle. La Palma, Ca. 90623
(714) 523-8700, Fax (714) 523-3220

PROGRESSIVETM SUSPENSION[®]


6911 Marlin Circle. La Palma, Ca. 90623
(714) 523-8700, Fax (714) 523-3220

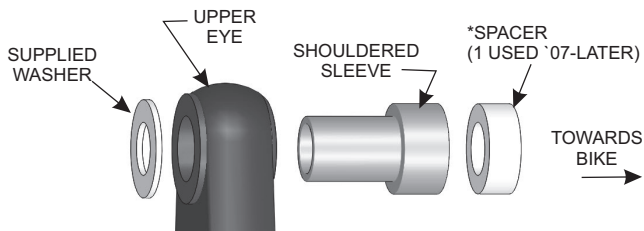

INSTALL SLEEVES AND SPACERS AS SHOWN IN ILLUSTRATIONS.


*NOTE: USE ONE OF THE SUPPLIED SPACERS ON EACH OF THE UPPER EYES OF 2007 AND LATER MODELS. EARLIER MODELS DO NOT REQUIRE SPACERS ON THE UPPER EYES.

**NOTE: ON LOWER EYES, IF BOLT PROTRUDES BEYOND THE THREADS (BELT-GUARD/NUT) INSTALL ONE OF THE SUPPLIED FLAT-WASHERS BETWEEN THE SHOULDERED SLEEVE AND THE SWINGARM.

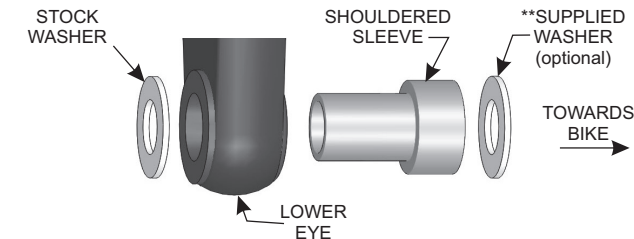

www.progressivesuspension.com


Copyright © 2014 by Progressive Suspension® All Rights Reserved.

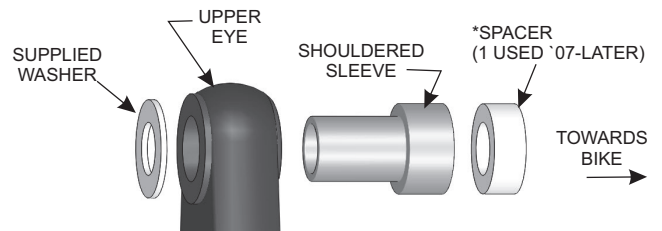

INSTALL SLEEVES AND SPACERS AS SHOWN IN ILLUSTRATIONS.

*NOTE: USE ONE OF THE SUPPLIED SPACERS ON EACH OF THE UPPER EYES OF 2007 AND LATER MODELS. EARLIER MODELS DO NOT REQUIRE SPACERS ON THE UPPER EYES.

**NOTE: ON LOWER EYES, IF BOLT PROTRUDES BEYOND THE THREADS (BELT-GUARD/NUT) INSTALL ONE OF THE SUPPLIED FLAT-WASHERS BETWEEN THE SHOULDERED SLEEVE AND THE SWINGARM.

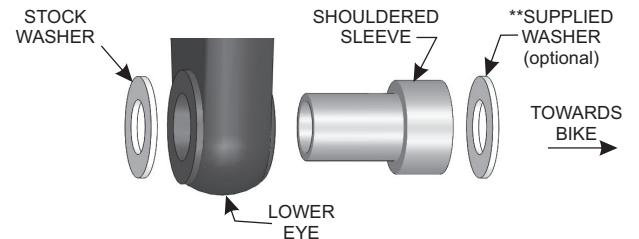

www.progressivesuspension.com

Copyright © 2014 by Progressive Suspension® All Rights Reserved.