



6911 Marlin Circle, La Palma, CA 90623
(714) 523-8700, Fax (714) 523-3220


BMW R65/R80RT/R100RS.RT 465 Series Single Shock supplement

Please Read these instruction completely before starting!

1. Install O-ring over the step on the spacers as shown. Install the shock with one spacer inside and one outside the shock as shown, do this for both top and bottom mounts.

2. Mount the shock, referencing your authorized shop manual, noting the following important details: Make sure the rebound adjustment is at the bottom, facing the rear of the motorcycle and the pressure valve is facing forward. Tighten shock bolts to the proper torque specifications (*refer to your manual*).

Caution: The installed spring length must never be set shorter than 5.62" or shock damage may occur.

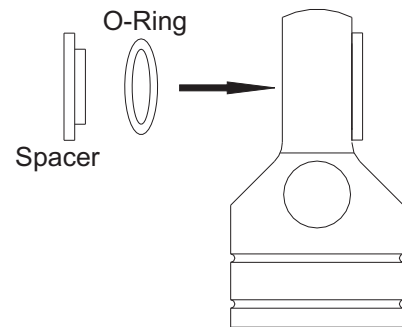

<http://www.progressivesuspension.com>



6911 Marlin Circle, La Palma, CA 90623
(714) 523-8700, Fax (714) 523-3220


BMW R65/R80RT/R100RS.RT 465 Series Single Shock supplement

Please Read these instruction completely before starting!

1. Install O-ring over the step on the spacers as shown. Install the shock with one spacer inside and one outside the shock as shown, do this for both top and bottom mounts.

2. Mount the shock, referencing your authorized shop manual, noting the following important details: Make sure the rebound adjustment is at the bottom, facing the rear of the motorcycle and the pressure valve is facing forward. Tighten shock bolts to the proper torque specifications (*refer to your manual*).

Caution: The installed spring length must never be set shorter than 5.62" or shock damage may occur.

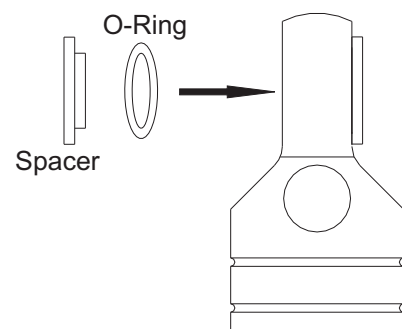

<http://www.progressivesuspension.com>