





6911 Marlin Circle, La Palma, CA 90623  
(714) 523-8700, Fax (714) 523-3220

## Yamaha Seca II 1992-1996 465 Series Single Shock Supplement

Please read these instructions completely before starting!

- Shouldered sleeves should already be installed in both shock eyes. If not, insert the sleeves as shown in figure 1 & 2.
- Mount the shock. Making sure the shock is mounted with the rebound adjustment toward the rear wheel, facing up and the nitrogen pressure valve should face down. Tighten the shock bolts to the proper torque specifications (refer to your manual)

Caution The installed spring length must never be set shorter than 5.12" or shock damage may occur.

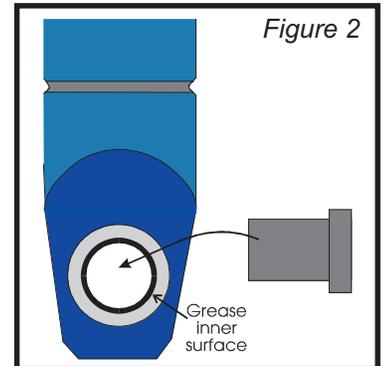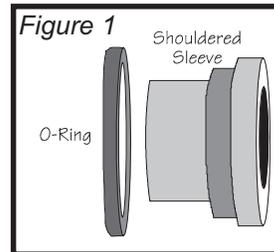

<http://www.progressivesuspension.com>





6911 Marlin Circle, La Palma, CA 90623  
(714) 523-8700, Fax (714) 523-3220

## Yamaha Seca II 1992-1996 465 Series Single Shock Supplement

Please read these instructions completely before starting!

- Shouldered sleeves should already be installed in both shock eyes. If not, insert the sleeves as shown in figure 1 & 2.
- Mount the shock. Making sure the shock is mounted with the rebound adjustment toward the rear wheel, facing up and the nitrogen pressure valve should face down. Tighten the shock bolts to the proper torque specifications (refer to your manual)

Caution The installed spring length must never be set shorter than 5.12" or shock damage may occur.

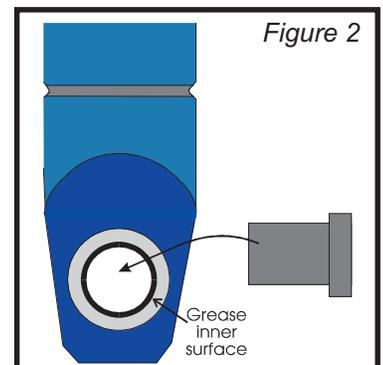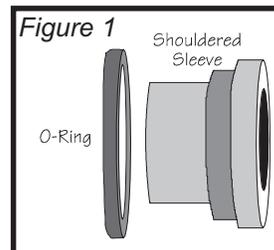

<http://www.progressivesuspension.com>