



6911 Marlin Circle, La Palma, CA 90623  
(714) 523-8700, Fax (714) 523-3220

## Suzuki DL650 & DL1000 V-Strom 465 Series Single Shock Supplement

### Please read these instructions completely before starting!

1. One set of the shouldered sleeves with O-rings should be installed in the shock eye. If not, insert sleeves with O-rings in the shock eye (see figure 1).
2. Mount the shock, referencing your authorized shop manual, noting the following important details: The rebound adjustment cam should face the left side of the bike and the pressure valve should face rearward.

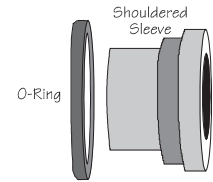


figure 1

**Caution:** The installed spring length must never be shorter than 7.50" for the 465-1162 and 7.10" for the 465-1164 or shock damage may occur.

<http://www.progressivesuspension.com>



6911 Marlin Circle, La Palma, CA 90623  
(714) 523-8700, Fax (714) 523-3220

## Suzuki DL650 & DL1000 V-Strom 465 Series Single Shock Supplement

### Please read these instructions completely before starting!

1. One set of the shouldered sleeves with O-rings should be installed in the shock eye. If not, insert sleeves with O-rings in the shock eye (see figure 1).
2. Mount the shock, referencing your authorized shop manual, noting the following important details: The rebound adjustment cam should face the left side of the bike and the pressure valve should face rearward.

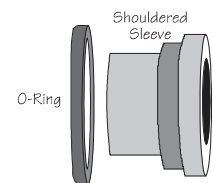


figure 1

**Caution:** The installed spring length must never be shorter than 7.50" for the 465-1162 and 7.10" for the 465-1164 or shock damage may occur.

<http://www.progressivesuspension.com>