



6911 Marlin Circle, La Palma, CA 90623
(714) 523-8700, Fax (714) 523-3220

Victory Vegas 465 Series Single Shock Supplement

Please read these instructions completely before starting!

1. One set of the shouldered sleeves with O-rings should be installed in the shock eye. If not, insert sleeves with O-rings in the shock eye (see figure 1).
2. Mount the shock, referencing your authorized shop manual, noting the following important details: Replace the stock lower mounting bolt with the longer bolt that is included. The rebound adjustment cam should face the right side of the bike and the pressure valve should face rearward.

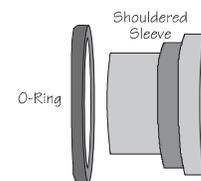


figure 1

Caution: The installed spring length must never be shorter than 5.40" for the 465-1163 and 4.90" for the 465-1167 or shock damage may occur.

<http://www.progressivesuspension.com>



6911 Marlin Circle, La Palma, CA 90623
(714) 523-8700, Fax (714) 523-3220

Victory Vegas 465 Series Single Shock Supplement

Please read these instructions completely before starting!

1. One set of the shouldered sleeves with O-rings should be installed in the shock eye. If not, insert sleeves with O-rings in the shock eye (see figure 1).
2. Mount the shock, referencing your authorized shop manual, noting the following important details: Replace the stock lower mounting bolt with the longer bolt that is included. The rebound adjustment cam should face the right side of the bike and the pressure valve should face rearward.

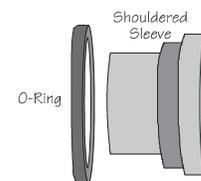


figure 1

Caution: The installed spring length must never be shorter than 5.40" for the 465-1163 and 4.90" for the 465-1167 or shock damage may occur.

<http://www.progressivesuspension.com>