



6911 Marlin Circle, La Palma, CA 90623
(714) 523-8700, Fax (714) 523-3220

Kawasaki VN 900 465 Series Single Shock Supplement

Please read these instructions completely before starting!

1. Shouldered sleeves with O-rings should already be installed in the shock eye. If not, insert sleeves with O-rings in the top eye (see figure).

2. Mount the shock, referencing your authorized shop manual, noting the following important details: Make sure the rebound adjustment is facing the right side of the motorcycle and the pressure valve is facing toward the rear. Tighten shock bolts to the proper torque specifications (refer to your manual).

Caution: The installed spring length must never be set shorter than 6.20" on the 465-1170 and 5.70" for 465-1171 (1"lowered application) or shock damage may occur.

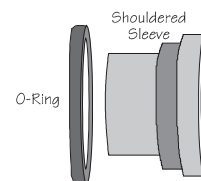


figure 1

<http://www.progressivesuspension.com>



6911 Marlin Circle, La Palma, CA 90623
(714) 523-8700, Fax (714) 523-3220

Kawasaki VN 900 465 Series Single Shock Supplement

Please read these instructions completely before starting!

1. Shouldered sleeves with O-rings should already be installed in the shock eye. If not, insert sleeves with O-rings in the top eye (see figure).

2. Mount the shock, referencing your authorized shop manual, noting the following important details: Make sure the rebound adjustment is facing the right side of the motorcycle and the pressure valve is facing toward the rear. Tighten shock bolts to the proper torque specifications (refer to your manual).

Caution: The installed spring length must never be set shorter than 6.20" on the 465-1170 and 5.70" for 465-1171 (1"lowered application) or shock damage may occur.

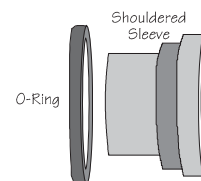


figure 1

<http://www.progressivesuspension.com>