



6911 Marlin Circle, La Palma, CA 90623
(714) 523-8700, Fax (714) 523-3220

465 Series Single Shock Supplement for Honda ST 1300


Please read these instructions completely before starting!

Shouldered sleeves with O-rings should already be installed in the shock eye. If not, insert sleeves with O-rings in the top eye (see figure 1).

Mount the shock, referencing your authorized shop manual, noting the following important details:

- Make sure the shock rebound adjustment is facing the right side of the motorcycle and the pressure valve is facing up and towards the rear. Tighten shock bolts to the proper torque specifications (refer to your manual).

Caution: The installed spring length must never be set shorter than 151mm (5.95") for the 465-1174 and 142mm (5.59") for the 465-1175 or shock damage may occur.

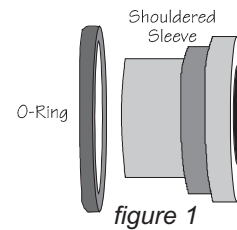

<http://www.progressivesuspension.com>



6911 Marlin Circle, La Palma, CA 90623
(714) 523-8700, Fax (714) 523-3220

465 Series Single Shock Supplement for Honda ST 1300


Please read these instructions completely before starting!

Shouldered sleeves with O-rings should already be installed in the shock eye. If not, insert sleeves with O-rings in the top eye (see figure 1).

Mount the shock, referencing your authorized shop manual, noting the following important details:

- Make sure the shock rebound adjustment is facing the right side of the motorcycle and the pressure valve is facing up and towards the rear. Tighten shock bolts to the proper torque specifications (refer to your manual).

Caution: The installed spring length must never be set shorter than 151mm (5.95") for the 465-1174 and 142mm (5.59") for the 465-1175 or shock damage may occur.

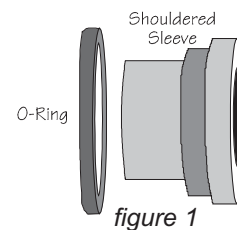

<http://www.progressivesuspension.com>