



6911 Marlin Circle, La Palma, CA 90623  
(714) 523-8700, Fax (714) 523-3220

## Kawasaki VN2000 465 Series Single Shock Supplement

Please read these instructions completely before starting!

One set of the shouldered sleeves with O-rings should be installed in the shock eye. If not, insert sleeves with O-rings in the shock eye (see figure 1).

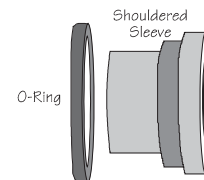


figure 1

Mount the shock, referencing your authorized shop manual, noting the following important details:

- Make sure the shock is mounted with the rebound adjustment facing the right and the nitrogen pressure valve is facing up.
- Tighten the shock bolts to the proper torque specifications (refer to your manual)

Caution: The installed spring length must never be set shorter than 149mm (5.85") for 465-1178 and 137mm (5.38") for 465-1179 or shock damage may occur.

<http://www.progressivesuspension.com>



6911 Marlin Circle, La Palma, CA 90623  
(714) 523-8700, Fax (714) 523-3220

## Kawasaki VN2000 465 Series Single Shock Supplement

Please read these instructions completely before starting!

One set of the shouldered sleeves with O-rings should be installed in the shock eye. If not, insert sleeves with O-rings in the shock eye (see figure 1).

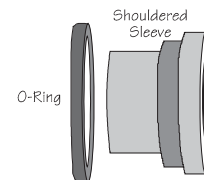


figure 1

Mount the shock, referencing your authorized shop manual, noting the following important details:

- Make sure the shock is mounted with the rebound adjustment facing the right and the nitrogen pressure valve is facing up.
- Tighten the shock bolts to the proper torque specifications (refer to your manual)

Caution: The installed spring length must never be set shorter than 149mm (5.85") for 465-1178 and 137mm (5.38") for 465-1179 or shock damage may occur.

<http://www.progressivesuspension.com>